WATERFALL AUDIO
SOUND DESIGNERS

User's Manual
Floorstanding speakers
Victoria Evo / Iguasçu Evo

Victoria Evo **Iguasçu Evo**

Warning :
GLASS. FRAGILE : HANDLE & USE WITH CARE.

Unpacking and using this product means you have read & understood this warning

Please read this notice before unpacking.
A minimum of 2 persons is requested to unpack or repack each Speaker.

WARNING : GLASS. FRAGILE. HANDLE & USE WITH CARE :
- The floorstanding speaker you have purchased is made of **GLASS PANELS.**
- Any Impact on the product could potentially damage the product.
- There is a potential risk of injury to persons if the product is not used as instructed.
- In the event the speakers break, **DO NOT** attempt to pick up the pieces of glass of the speaker without first protecting your hands and using appropriate tools in collecting the pieces of the speaker.
- This product has been designed for indoor residential use only.
- These speakers are to not be positionned in an area of passage.

USE CAUTION WHEN UNPACKING, REPACKING, INSTALLING AND USING THE PRODUCT.

1) Unpacking : **Always unpack your speakers with somebody's help.**

Unpacking and repacking of the speakers has to be done with the help of a second person.

Remove the driver's protection cover. **Beware : fragile driver.**

The help of a second person is required to upload each speaker. Beware not to hit the speakers against eachother.

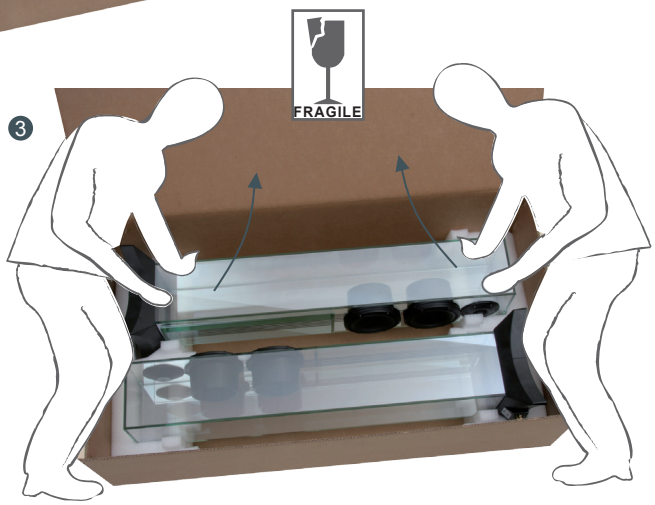

2) Cleaning :

Any glass cleaner can be used, (however, we recommend Ajax), apply with a soft paper towel. **Never use abrasive products or sponges or sand paper.**

3) Positionning :

This product has been designed for indoor residential use only. This product is not intended to be placed in any area of passage, including but not limited to walk ways and stairways. In addition, Iguascu, Victoria, and Niagara speakers have been designed to be used only on indoor flooring, and must not be affixed to walls, attached to ceilings, placed in entertainment centers or otherwise used or placed in any location other than on the floor.
Make sure your speakers are positioned on a perfectly flat and level surface. Placing your speakers in a corner will enhance the low frequencies, and placing further off the wall will enhance the sound image. However each room and configuration being different and unique, we advise you to test different positions to achieve the best performance.

4) Connections : never plug the speakers into the mains supply

Make sure the cable is of the right section and specific to loudspeakers connection. Follow the polarities : + (red terminal), - (black terminal), for each speaker. Use the same length cable for both right and left speakers. Do not connect your speakers directly to the mains.
We highly recommend the use of Waterfall Audio Cable made up with a high quality oxygen free copper, which you can purchase from your Waterfall dealer.

5) Low frequency Tunning :

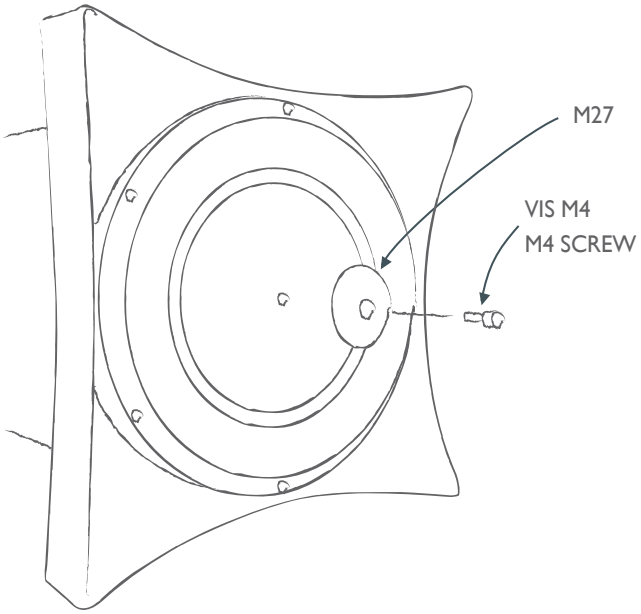

Your speakers are equipped with a passive driver for very low frequencies. It is possible to adjust the low frequency response by screwing in the small weights provided with your speakers (7gr) M7 and 27gr (M27), you will then reach various acoustic performances as detailed below :

- Victoria "Evo"
Without weights : extension up to 50 Hz, +2dB.
With the M7 weights : extension up to 45 Hz, +1 dB.
With the M27 : linear extension up to 40 Hz.
- Iguasçu "Evo"
Without weights : extension up to 60 Hz, +2dB
With the M7 weights : extension up 55Hz, +1 dB
With the M27 : linear extension to 50 Hz

WARNING :
Please beware never to position 2 weights on the passive driver.

- Grills :

Your speakers are delivered with removable grills, which clip themselves onto the driver.

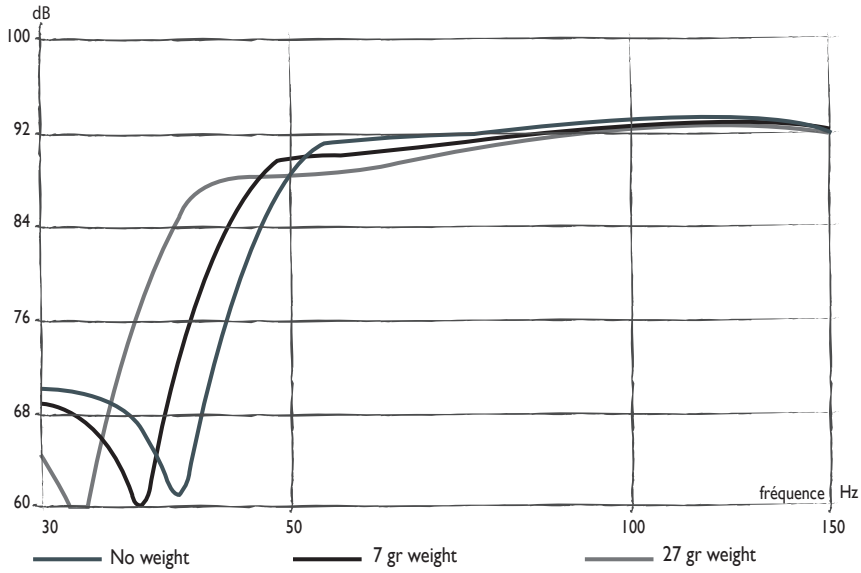

Bass extension response depending of the chosen weight

6) Warranty :

See Waterfall Warranty Card

This document is to be included in any resale of the product.